



## ! INFO !

- (DE) Die Batterie des Zugfahrzeugs bzw. gezogenen Fahrzeugs nicht direkt über die Steckdose aufladen.
- (FR) Ne pas charger les batteries du véhicule tracteur et/ou tracté directement sur la prise de courant.
- (NL) De accu van het trekkend voertuig c.q. getrokken voertuig niet rechtstreeks via de contactdoos opladen.
- (GB) Do not charge the battery of the towing vehicle and/or towed vehicle directly via the socket.
- (ES) No recargue la batería del vehículo remolque y/o del remolcado directamente mediante el enchufe.
- (IT) Non caricare la batteria del veicolo trainante o di quello trainato direttamente dalla presa.
- (SE) Ladda inte batteriet i det bogserande fordonet och/eller det bogserade fordonet direkt via kontakten.
- (CZ) Nenabíjte baterii tažného ani taženého vozidla přes zásuvku.
- (DK) Oplad ikke bugseringskøretøjet og/eller det bugserede køretojs batteri direkte v.h.a. stikdåsen.
- (FI) Älä lataa hinaavan ajoneuvon ja/tai hinattavan ajoneuvon akkuja suoraan pistorasiaan kautta.
- (GR) Μη φορτίσετε την μπαταρία του ρυμουλκούμενου οχήματος και/ή ρυμουλκημένου οχήματος απευθείας μέσω του ρευματοδότη.
- (NO) Batteriet til kjøretøyet som trekker eller blir trukket skal ikke lades direkte via koblingsboksen.
- (PL) Nie ładować akumulatora pojazdu holującego/holowanego bezpośrednio przez gniazdo.

- |      |                       |
|------|-----------------------|
| (DE) | Gebrauchsleitung      |
| (FR) | Mode d'emploi         |
| (NL) | Gebruikershandleiding |
| (GB) | User guide            |
| (ES) | Guía del usuario      |
| (IT) | Manuale di istruzioni |
| (SE) | Bruksanvisning        |
| (CZ) | Uživatelská příručka  |
| (DK) | Brugervejledning      |
| (FI) | Käyttöohjeet          |
| (GR) | Οδηγός χρήστη         |
| (NO) | Brukerveiledning      |
| (PL) | Instrukcja obsługi    |

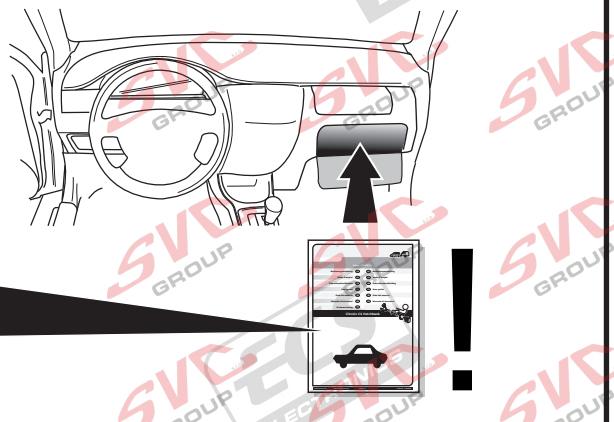

## SPARE PARTS

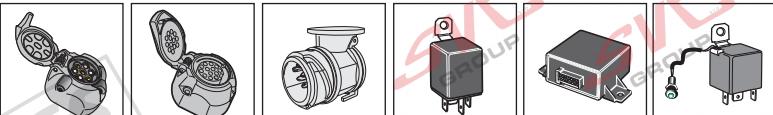

[www.ecs-electronics.com](http://www.ecs-electronics.com)



Partnr.: TO-148-DB

Gebrauchsleitung

(DE)

Mode d'emploi

(FR)

Gebruikershandleiding

(NL)

User guide

(GB)

Guía del usuario

(ES)

Manuale di istruzioni

(IT)

Bruksanvisning

(SE)

Uživatelská příručka

(CZ)

Brugervejledning

(DK)

Käyttöohjeet

(FI)

Oδηγός χρήστη

(GR)


Brukerveiledning

(NO)

Instrukcja obsługi

(PL)

Toyota Avensis 11/2008-

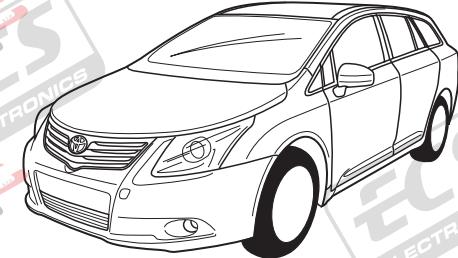



Anschluss Steckdose  
 Connection de la prise  
 Contactdoos aansluiting  
 Socket connection

- ES Conexión de la caja de e
- IT Allaccio zoccolo
- SE Anslutning kontaktdosa




- CZ Objektivní konektor
- DK Stikdåse forbindelse
- FI Pistorasia liitäntä

Υποδοχή σύνδεσης  
 Tilkobling koblingsboks  
 Połączanie przez gniazdo







<b>DE</b> Sicherungen austauschen	<b>ES</b> Cambio de fusible	<b>CZ</b> Výměna pojistky	<b>GR</b> Αλλαγή ασφάλειας
<b>FR</b> Remplacer les fusibles	<b>IT</b> Sostituire i fusibili	<b>DK</b> Udskiftning af sikringer	<b>NO</b> Skifte sikringene
<b>NL</b> Zekeringen vervangen	<b>SE</b> Byte av säkringar	<b>FI</b> Vaihda varokekkeet	<b>PL</b> Wymienić bezpieczniki
<b>GB</b> Changing the fuse			

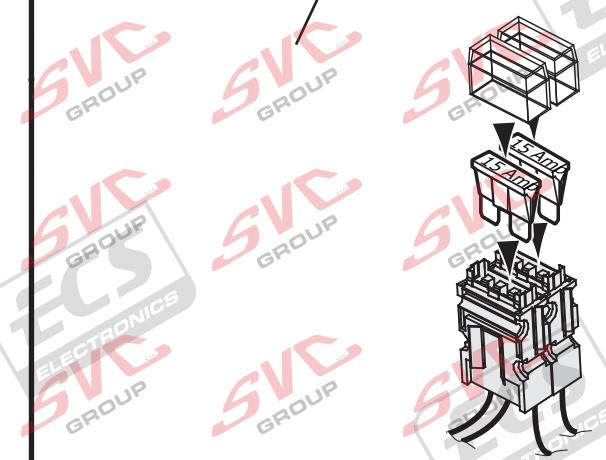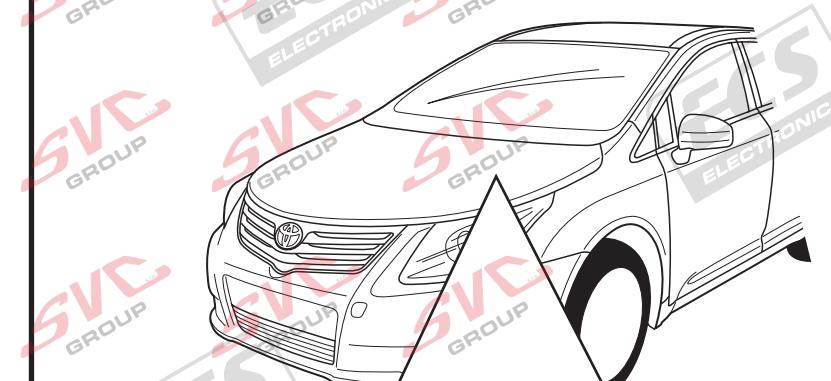





INFO : Storage

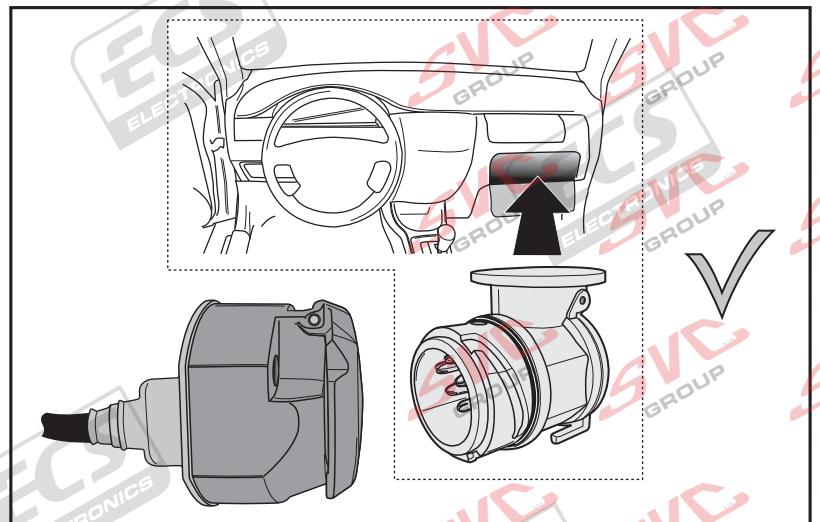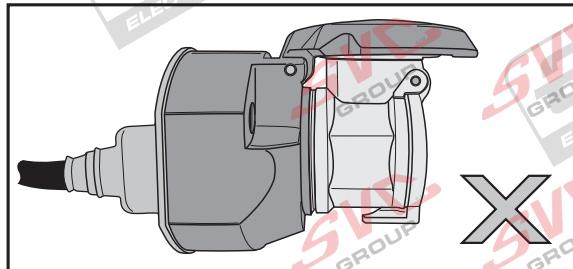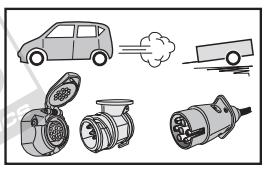



INFO

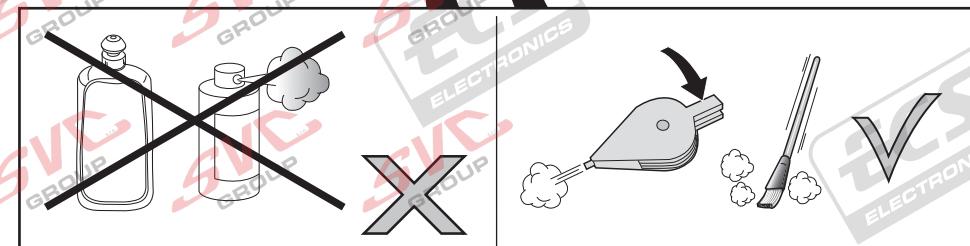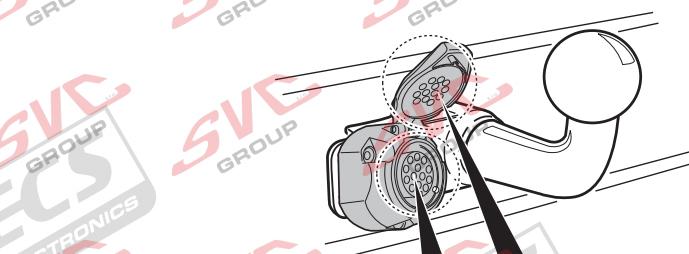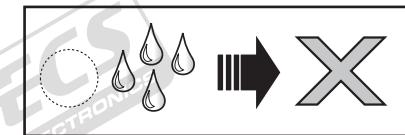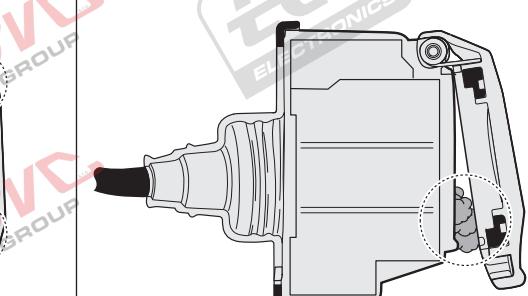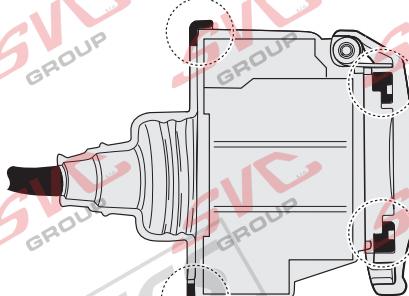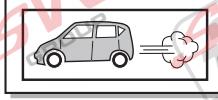





INFO : Ring.

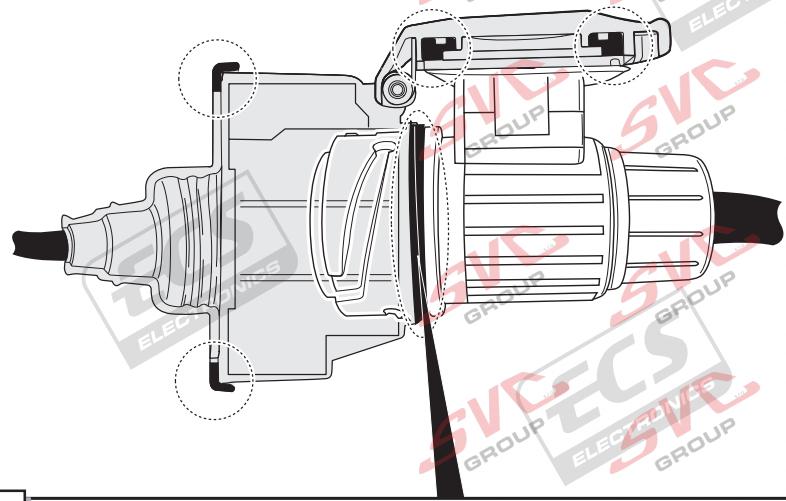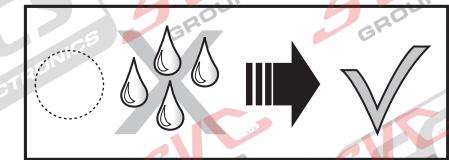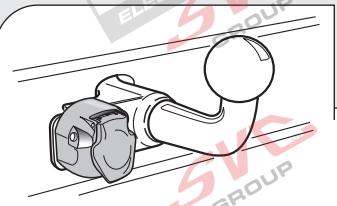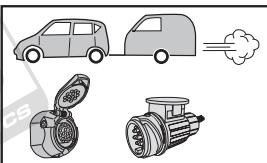

INFO

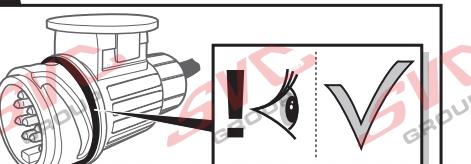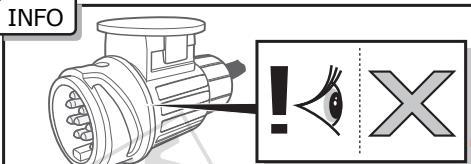

INFO : Adapt.

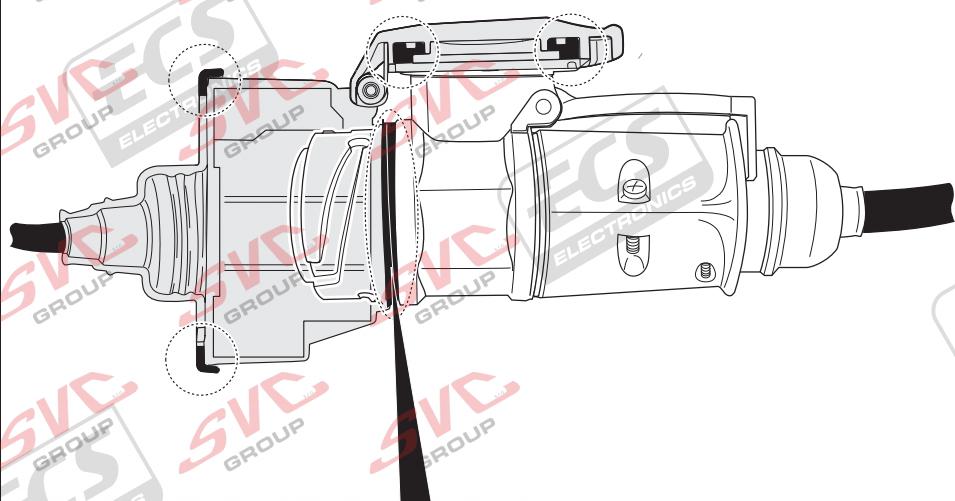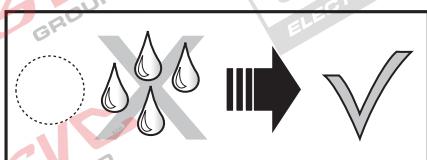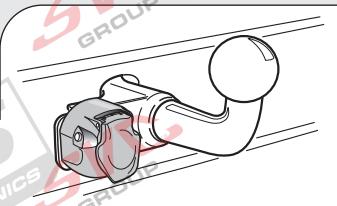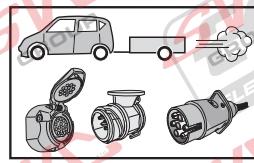

INFO

