

# Montážní návod

(Montážny návod, Fitting instruction, Montageanleitung, Instruzioni di montaggio, Monteringshandledning, Asennusohje, Instruction de montage, Montegehandleiding, Инструкция по установке)



# Tažné zařízení Daewoo Kalos Sedan 2002->2009

Tažné zariadenie

Towbars

Trekhaak

Anhängerkupplung de

Dispositif d'attelage

Equipo de remolque

Sprzęt holowniczy

Hinauslaitteet

Буксирное оборудование



výrobce / dodavatel  
**SVC Group s.r.o.**

Odkaz na produkt:

<https://www.svcgroup.cz/tazne-zarizeni-srouby-pevny-skoda-rapid-monte-carlo-10-2012-2018-p7283-v960>



[www.svcgroup.cz](http://www.svcgroup.cz)



#### Fitting instructions:


1. Dismantle an exhaust pipe bracket and a carbon filter from a beam. Take a boot mat out of a boot. Dismantle a tow ring (this will not be needed anymore).
2. Mark 4 holes from the bottom side of the floor and drill them from the boot (diameter of 11mm).
3. Put two M10x110 bolts from a boot through slashes on the left side and one M10x110 bolt on the right side. In the place of a carbon filter the one M10x100 bolt comes from the bottom to the boot, i.e. the head from the bottom
4. Then put tube spacers to the beam from the bottom side according to a drawing and then attach a tow bar to a car.
5. Tighten all nuts and bolts according to torque moments and put the exhaust pipe bracket, carbon filter and dismantled parts back.

#### General instructions:

- 1 Remove insulating material on a car body in grips and joints of a tow bar with a car body. Clean all drilled holes with anticorrosive agent and remove all metal shavings.
- 2 Keep ball hitch and all moving parts clean and grease them, use on friction areas and use original supplied plastic covering caps.
- 3 Use supplied mechanical strength jointing material.
- 4 It is recommended to retighten all fixing bolts and nuts after coupling device has been in use approximately 1000 km.
- 5 According to a law a ball hitch cannot cover a number plate.
- 6 Wiring of a tow bar must be up to a standard and car maker requirements (see a car manual or ask a car dealer).

The tow bar has been physically tested according to a regulation 94/20/EC and EHK UN No.55 and fulfils all prescribed ES regulations

Obr.1

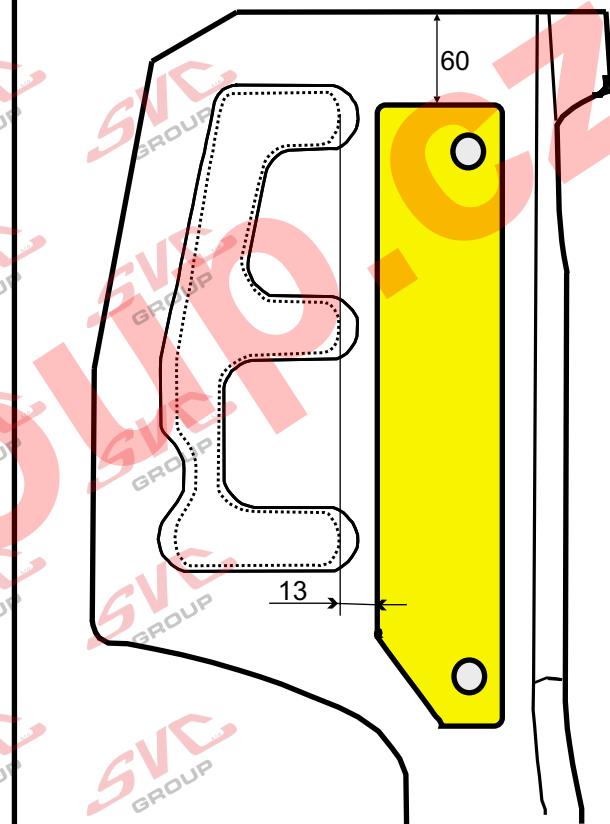

**INFO: [www.svcnachod.cz](http://www.svcnachod.cz)**

Nevíte si rady? Potřebujete poradit?

# Náš zakaznický servis je vám k dispozici

 +420 491 421 021

 [svc@svcgroupt.cz](mailto:svc@svcgroupt.cz)



Opravdový specialista a Certifikovaný výrobce tažných zařízení  
s největším sortimentem v ČR. Rodinná firma s více jak 30letou  
ověřenou tradicí výroby, prodeje a montáže.

[www.svcgroup.cz](http://www.svcgroup.cz)